


GRID ZONE DESIGNATION 10V 100,000 M. SQUARE IDENTIFICATION	TO GIVE A STANDARD REFERENCE ON THIS SHEET TO MEASURE 10,000 FEET										
CA CD DV 650	SAMPLE POINT: HORIZONTAL CONTROL										
40 (GIVE THE SMALLER FIGURES OF any grid number; these are for finding the larger figures of the grid number; example: 330,000 m. E.,	<table border="0"> <tr> <td>1. Read letters identifying 100,000 meter square in which the point is:</td> <td>CV</td> </tr> <tr> <td>2. Locate from VERTICAL grid line to LEFT of point and read LARGE figure labeling the line in the top or bottom margin, or the top line:</td> <td>8</td> </tr> <tr> <td>3. Estimate tenths from grid line to point:</td> <td>5</td> </tr> <tr> <td>4. Locate from HORIZONTAL grid line to point and read LARGE figure labeling the line in the left or right margin, or the right line:</td> <td>8</td> </tr> <tr> <td>5. Estimate tenths from grid line to point:</td> <td>5</td> </tr> </table>	1. Read letters identifying 100,000 meter square in which the point is:	CV	2. Locate from VERTICAL grid line to LEFT of point and read LARGE figure labeling the line in the top or bottom margin, or the top line:	8	3. Estimate tenths from grid line to point:	5	4. Locate from HORIZONTAL grid line to point and read LARGE figure labeling the line in the left or right margin, or the right line:	8	5. Estimate tenths from grid line to point:	5
1. Read letters identifying 100,000 meter square in which the point is:	CV										
2. Locate from VERTICAL grid line to LEFT of point and read LARGE figure labeling the line in the top or bottom margin, or the top line:	8										
3. Estimate tenths from grid line to point:	5										
4. Locate from HORIZONTAL grid line to point and read LARGE figure labeling the line in the left or right margin, or the right line:	8										
5. Estimate tenths from grid line to point:	5										
SAMPLE REFERENCE:	CV 85 89										
(reporting beyond 10" in any direction)	CV 85 89										

TEN THOUSAND METRE
UNIVERSAL TRANSVERSE MERCATOR GRID
ZONE 10

THE DECLINATION OF THE COMPASS NEEDLE, 1954

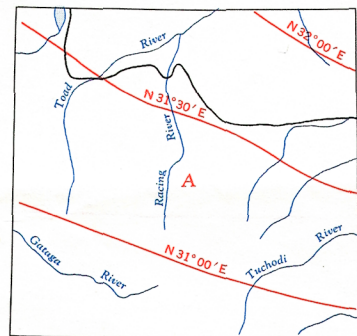

The declination of the compass needle at any place along a red line is the declination given on that red line. At other places the declination is between those given on the neighbouring red lines; thus at the place marked A, the declination is between N. $31^{\circ}E$. and N. $31^{\circ}30'E$. The easterly declinations of the compass needle are decreasing 5 minutes annually.

Surveyed, compiled, drawn and printed by the ARMY SURVEY ESTABLISHMENT R.C.E., 1949-54
Aerial photography by the R.C.A.F. 1948

Universal Transverse Mercator Projection

REFERENCE

Road, Hard Surface, All Weather.....	More than 2 Lanes	State No. 2 Lanes
" " Loose Surface, All Weather.....	2 Lanes Wide or More	
" " " Less than 2 Lanes.....	All Weather	Dry Weather
Cart Track, Trail.....	Cart Track	Trail
Railway, Multiple Track.....		
" " Single Track.....		
Boundary, International.....		
" " Province or State.....		Manner
" " County or District.....		
" " Reservations, Indian, Military, etc.		

TUCHODI LAKES



BRITISH COLUMBIA

Scale 1 : 250,000
Inch to 4 Miles Approximately

Copies may be obtained from
The Map Distribution Office,
Dept. of Mines and Technical Surveys,
Ottawa.

Contour Interval 500 Feet
All Elevations in Feet above Mean Sea Level
North American Datum 1927
Preliminary 1951

REFERENCE

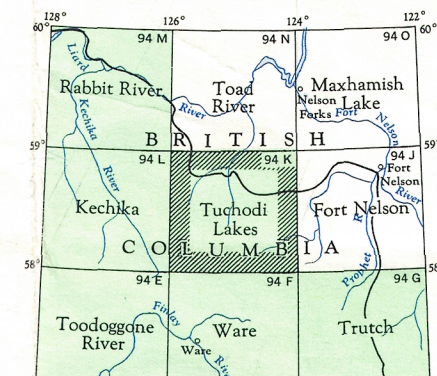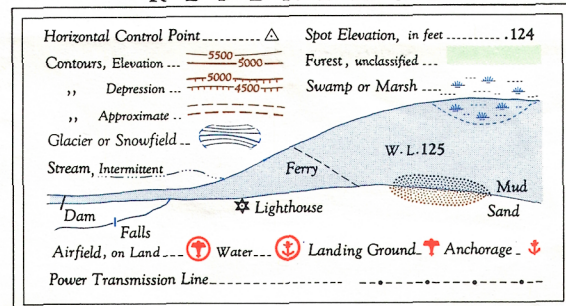

NOTE: On the above index the sheets published are shown tinted green.

TUCHODI LAKES
SHEET 94 K

FIRST EDITION